



PlayStation®VR Aim Controller /
Manette de visée PlayStation®VR

Instruction Manual / Mode d'emploi

CECHYA-ZRA2

ENGLISH

Before use

- Before using this product, carefully read this manual as well as the documentation for PlayStation®VR and the PlayStation®4 system. For details on using the PS VR Aim Controller with a specific game, refer to the instruction manual for that game.
- Always update your PS4™ system to the latest version of the system software.
- Retain instructions for future reference.
- For assistance with this product, visit playstation.com/helpme.

Use and handling precautions

- Avoid prolonged use of the controller. Take a break at about 30 minute intervals.
- Stop using the controller immediately if you begin to feel tired or if you experience discomfort or pain in your hands or arms during use. If the condition persists, consult a doctor.
- Stop using the controller immediately if you experience any discomfort or pain in any body parts.
- The controller is intended for use with the hands only. Use both hands to grip the controller.
- The vibration function of the controller may aggravate injuries. Do not use the vibration function if you have any ailment or injury to the bones, joints, or muscles of your hands or arms.
- Note that some software titles enable the vibration function by default. To disable the vibration function, select [PS] (Settings) ➡ [Devices] ➡ [Controllers] from the function screen, and then remove the checkmark from [Enable Vibration].
- Do not expose the controller to high temperatures, high humidity or direct sunlight.
- Do not allow the controller to come into contact with liquids.
- Do not put heavy objects on the controller.
- Do not throw or drop the controller or subject it to strong physical shock.
- Do not handle damaged or leaking lithium-ion batteries.
- When using the motion sensor function, be cautious of the following points. If the controller hits a person or object, this may cause accidental injury or damage.
 - Before using, check that there is plenty of space around you.
 - When using the controller, grip it firmly to make sure it cannot slip out of your hands.
 - If using the controller while it is connected to the PlayStation®4 system with a USB cable, make sure there is enough space for the cable so that the cable will not hit a person or object. Also, take care to avoid pulling the cable out of the PS4™ system while using the controller.

Exterior protection

- Follow the instructions below to help prevent the controller's exterior from deteriorating or becoming discolored.
- Do not place any rubber or vinyl materials on the controller's exterior for an extended period of time.
 - Use a soft, dry cloth to clean the controller. Do not use solvents or other chemicals. Do not wipe with a chemically-treated cleaning cloth.

End of life product recycling

The PS VR Aim Controller contains a lithium-ion battery. Follow local regulations when disposing of this product. Sony products can be recycled for free in the United States and Canada by dropping the product off at a number of nationwide locations. Visit www.sony.net/SonyInfo/csr/SonyEnvironment/spotlight/ for details.

FCC and IC Notice

This equipment complies with FCC and IC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines and RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment has very low levels of RF energy that are deemed to comply without testing of specific absorption rate (SAR).

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- You are cautioned that any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

If you have questions about this product, visit playstation.com/helpme.

Declaration of Conformity	
Trade Name :	Sony Interactive Entertainment America LLC
Model No. :	CECHYA-ZRA2
Responsible Party :	Sony Interactive Entertainment America LLC
Address :	2207 Bridgepointe Parkway, San Mateo, CA 94404
Telephone No. :	650-655-8000
This device complies with Part 15 of FCC Rules and Industry Canada license-exempt RSS standard(s).	
Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.	

Part names


Side view

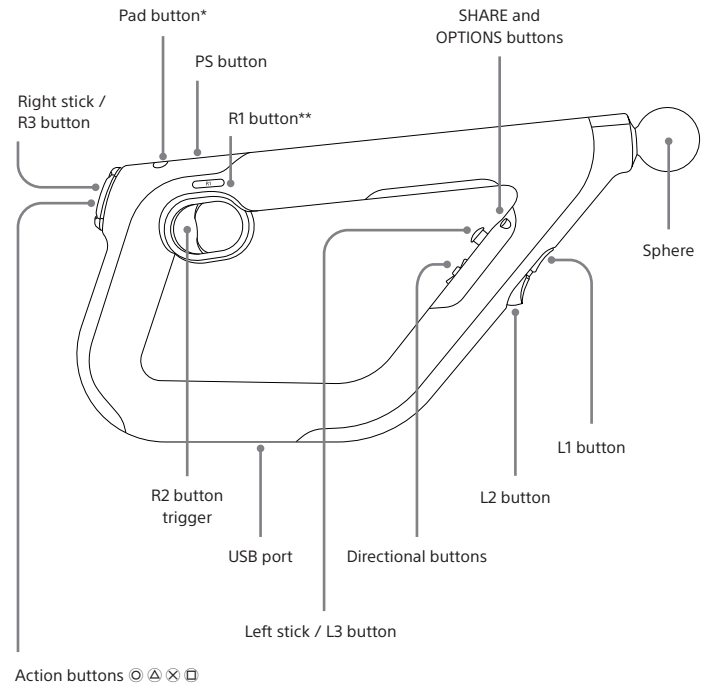

* Click only; other touchpad functions are not available.

** The PS VR Aim Controller has two R1 buttons, one on either side above the R2 button trigger. This enables you to use the PS VR Aim Controller with either a left-handed or right-handed grip, depending on your preference.

Rear view

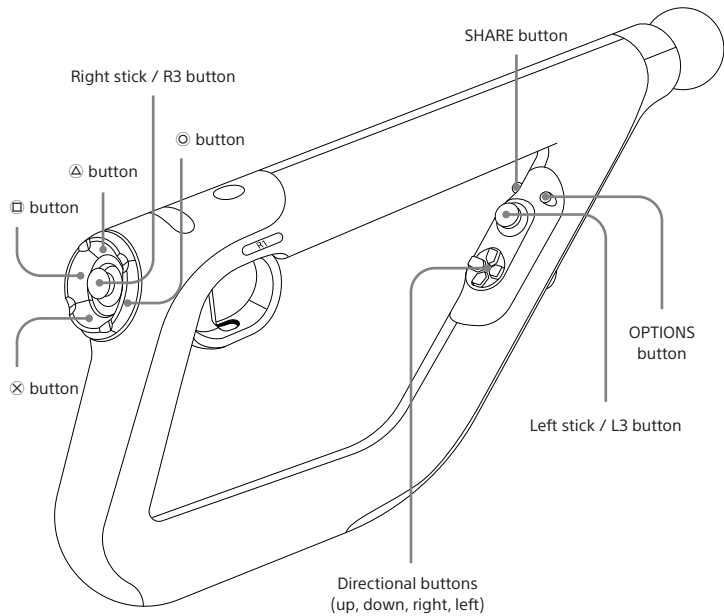

Pair your controller

The PS VR Aim Controller is a Bluetooth® device. You'll need to pair your controller when you use it for the first time and when you use it with another PS4™ system.


With your PS4™ system either on or in rest mode, connect your controller using a USB cable, and then press the [PS] button. Your controller pairs with the system and turns on. After you've paired your controller, you can disconnect the USB cable and use your controller wirelessly.

Charge your controller

Make sure your controller is charged and ready to go before you start playing.

With your PS4™ system either on or in rest mode, connect your controller to your system using a USB cable.

To charge your controller while your system is in rest mode, select an option other than [Off] in [PS] (Settings) ➡ [Power Save Settings] ➡ [Set Features Available in Rest Mode] ➡ [Supply Power to USB Ports].

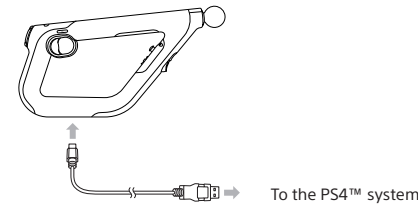

The sphere flashes slowly when charging, and stops flashing when charging is complete.

Battery life and duration

- The battery has a limited life span. Battery duration will gradually decrease with repeated usage and age. Battery life also varies depending on the storage method, conditions of use and environmental factors.
- Charge in an environment where the temperature range is between 10 °C - 30 °C (50 °F - 86 °F).
- Charging may not be as effective when performed in other environments.
- Fully charge your controller at least once a year to help maintain battery functionality.
- When the battery level on the controller is low, a notification appears on-screen.

Basic operation

Power

Press the [PS] button to turn on your controller. Your controller will turn off automatically when it's not in use.

Controls


The PS VR Aim Controller duplicates nearly all of the controls and functions of a DUALSHOCK®4 wireless controller, as adapted to use with PS VR games.

Refer to the PlayStation®4 User's Guide for more information on basic button operations.

Recommended grip

Note

Use both hands to grip the controller. Typical right-handed grip shown. Reverse of this grip will also work for left-handers.

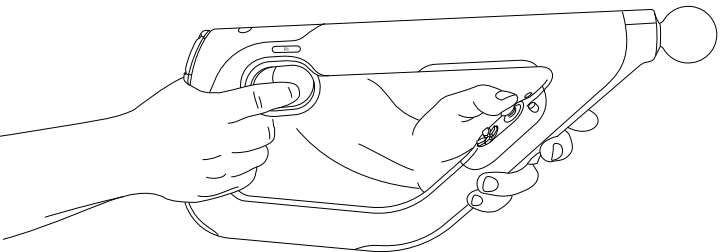

Play Area

Limit your use of your controller and PS VR to within the Play Area. The height of the Play Area depends on the range captured by the PlayStation®Camera. See PS VR documentation for more information about the Play Area.

Tracking

The PlayStation®Camera tracks the sphere on your controller for PS VR gameplay. Make sure the sphere is visible to the camera when playing.

Specifications

Input power rating:	5 V ≍ 800 mA
Battery type:	Built-in rechargeable lithium-ion battery
Voltage:	3.65 V ≍
Battery capacity:	1 Ah
Operating temperature:	5 °C – 35 °C (41 °F – 95 °F)
Mass:	Approx. 490 g (17.3 oz)

Design and specifications are subject to change without notice.

LIMITED WARRANTY

Sony Interactive Entertainment America LLC (SIEA) warrants to the original purchaser that this product shall be free from defects in material and workmanship for a period of one (1) year from the date of purchase. This warranty does not apply to any consumables (such as batteries). For defects in material or workmanship within the warranty period, upon showing a proof of purchase, SIEA agrees for a period of one (1) year to either repair or replace this product with a new or factory recertified product at SIEA's option. For the purpose of this Limited Warranty, "factory recertified" means a product that has been returned to its original specifications. Visit playstation.com/helpme or call 1-800-345-7669 to receive a return authorization and shipping instructions.

This warranty shall not be applicable and shall be void if the defect in the SIEA product has arisen through abuse, unreasonable use, mistreatment, neglect, or means other than from a defect in materials or workmanship. THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES AND NO OTHER REPRESENTATIONS OR CLAIMS OF ANY NATURE SHALL BE BINDING ON OR OBLIGATE SIEA. ANY IMPLIED WARRANTIES APPLICABLE TO THIS PRODUCT, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE ONE (1) YEAR PERIOD DESCRIBED ABOVE. IN NO EVENT WILL SIEA BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM POSSESSION, USE OR MALFUNCTION OF THE SIEA PRODUCT. SOME STATES OR PROVINCES DO NOT ALLOW LIMITATION ON HOW LONG AN IMPLIED WARRANTY LASTS AND SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATIONS OF CONSEQUENTIAL OR INCIDENTAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSION MAY NOT APPLY TO YOU.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state or province to province.

This warranty is valid only in the United States and Canada.

FRANÇAIS

Avant utilisation

- Avant d'utiliser ce produit, veuillez lire attentivement le présent mode d'emploi ainsi que la documentation du casque virtuel PlayStation®VR et du système PlayStation®4. Pour plus de détails sur l'utilisation de la manette de **visée** pour un jeu en particulier, consultez le mode d'emploi du jeu concerné.
- Il est conseillé de toujours mettre à jour votre système PS4™ vers la version la plus récente du logiciel système.
- Conservez le présent mode d'emploi pour vous y reporter ultérieurement.
- Pour obtenir de l'aide sur ce produit, visitez la page playstation.com/helpme.

Précautions d'utilisation et de manipulation

- Évitez toute utilisation prolongée de cette manette. Accordez-vous une pause toutes les **30 minutes environ**.
- Arrêtez immédiatement d'utiliser cette manette si vous commencez à vous sentir fatigué ou si vous éprouvez une sensation désagréable ou une douleur dans les mains ou les bras pendant son utilisation. Si les symptômes persistent, consultez un médecin.
- En cas de sensation de gêne ou de douleur corporelle, arrêtez immédiatement d'utiliser la manette.
- **Cette manette est conçue pour être utilisée uniquement avec les mains. Utilisez vos deux mains pour tenir la manette.**
- La fonction de vibration de cette manette peut aggraver les blessures. N'utilisez pas la fonction de vibration si vous avez des blessures ou des problèmes osseux, articulaires ou musculaires aux mains ou aux bras.
- Remarque : sur certains logiciels, la fonction de vibration est activée par défaut. Pour désactiver la fonction de vibration, sélectionnez  (Paramètres) ➡ [Périphériques] ➡ [Manettes de jeu] à partir de l'écran de commande, puis décochez la case [Activer la vibration].
- **N'exposez pas ce produit** à des températures élevées, à une humidité excessive ou au rayonnement direct du soleil.
- Ne laissez pas **la manette** entrer en contact avec les liquides.
- Ne posez aucun objet lourd sur **la manette**.
- Ne lancez pas ou ne laissez pas tomber **la manette** et ne l'exposez pas à de violents chocs physiques.
- Ne manipulez pas les batteries aux ions de lithium endommagées ou fuyant.
- Lorsque vous utilisez la fonction de détection de mouvement, soyez attentif aux points suivants. Si la manette percute une personne ou un objet, ce mouvement peut entraîner une blessure ou des dommages accidentels.
 - Avant toute utilisation, vérifiez qu'il y a assez d'espace autour de vous.
 - Lorsque vous utilisez la manette, tenez-la fermement et assurez-vous qu'elle ne risque pas de vous glisser de la main.
 - Si vous utilisez une manette **branchée** à un système **PlayStation®4** à l'aide d'un câble USB, veillez à ce qu'il y ait assez d'espace pour que le câble ne percute aucune personne ni objet. Veillez également à ne pas **débrancher** le câble du système PS4™ durant l'utilisation de la manette.

Protection externe

- Respectez les instructions ci-dessous pour éviter toute détérioration ou décoloration de l'extérieur du produit.
- Ne placez pas de matériaux en caoutchouc ou en vinyle sur l'extérieur du produit pendant une période prolongée.
 - Essuyez la manette à l'aide d'un chiffon doux et sec. N'utilisez pas de solvants ou d'autres produits chimiques. N'essuyez **pas la manette** avec un chiffon de nettoyage traité chimiquement.

Recyclage des produits en fin de vie

La manette **de visée** PS VR contient une batterie aux ions de lithium. Suivez les règlements applicables de votre région lorsque vous souhaitez mettre ce produit au rebut. Les produits Sony peuvent être recyclés gratuitement aux États-Unis et au Canada en les déposant dans un centre de recyclage.

Consultez www.sony.net/SonyInfo/csr/SonyEnvironment/spotlight/ pour plus de détails.

Déclaration de la FCC et d'IC

Cet équipement est conforme aux limites d'exposition aux fréquences radio FCC et IC établies pour un environnement non contrôlé et se conforme aux limites d'exposition aux fréquences radio telles que définies par la FCC et le CNR 102 d'IC. Cet équipement possède des niveaux d'énergie RF très bas qui se conforment sans tests nécessaires aux taux d'absorption spécifique (SAR).

Cet émetteur ne doit pas être utilisé conjointement ou placé avec tout autre émetteur ou antenne.

REMARQUE

- Cette unité a été testée et jugée conforme aux normes stipulées par l'article 15 des règlements de la FCC pour un appareil numérique de catégorie B.
- Ces normes sont établies afin d'offrir une protection raisonnable contre toute possibilité de brouillage préjudiciable dans une installation résidentielle. Cette unité produit, utilise et peut émettre une énergie **radioélectrique et**, elle n'est pas installée et utilisée conformément aux instructions, pourrait causer un brouillage préjudiciable à la radiocommunication. Il est toutefois impossible de garantir qu'il n'y aura pas de brouillage préjudiciable dans une installation donnée. Si cet appareil cause un brouillage préjudiciable à la réception radio ou télévisuelle, ce qui peut être déterminé en activant **ou en** désactivant l'appareil, l'utilisateur est encouragé à tenter de corriger le brouillage en prenant l'une ou plusieurs des mesures proposées suivantes :
- Réorienter ou déplacer l'antenne de réception.
 - Éloigner l'unité du récepteur.
 - **Brancher** l'appareil à une prise sur un autre circuit que celui auquel le récepteur est **branché**.
 - Demander de l'aide au détaillant ou à un technicien radio/télévision spécialisé.

Aucun changement **ni aucune** modification n'est autorisé sans avoir été approuvé par les parties responsables des réglementations qui sont en droit d'interdire l'utilisation de ce produit par l'utilisateur.

Si vous avez des questions au sujet de ce produit, allez à playstation.com/helpme.

Déclaration de conformité	
Marque commerciale :	Sony Interactive Entertainment America LLC
N° de modèle :	CECHYA-ZRA2
Partie responsable :	Sony Interactive Entertainment America LLC
Adresse :	2207 Bridgepointe Parkway, San Mateo, CA 94404
N° de téléphone :	650-655-8000
Cet appareil est conforme à la section 15 des règlements de la FCC et aux CNR d'Industrie Canada exempts de licence.	
Son fonctionnement est soumis aux deux conditions suivantes : (1) Cet appareil ne peut causer d'interférences nuisibles et (2) cet appareil doit accepter toute interférence reçue, y compris les interférences pouvant entraîner un fonctionnement non désiré.	

Noms des composantes

Vue latérale

